



LG G Pad 8.3 Speaker Replacement

The guide will show you how to replace the speaker.

Written By: Mario Salguero



INTRODUCTION

If your speaker isn't working, it may be time to replace it. This guide will show you how to replace the speaker.



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iOpener Kit](#) (1)
-

Step 1 — Back Panel



- With the tablet face down, pull out the SD card slot cover.
- Using a Philips #000 screwdriver, remove the 3mm screw in the SD card slot.

Step 2

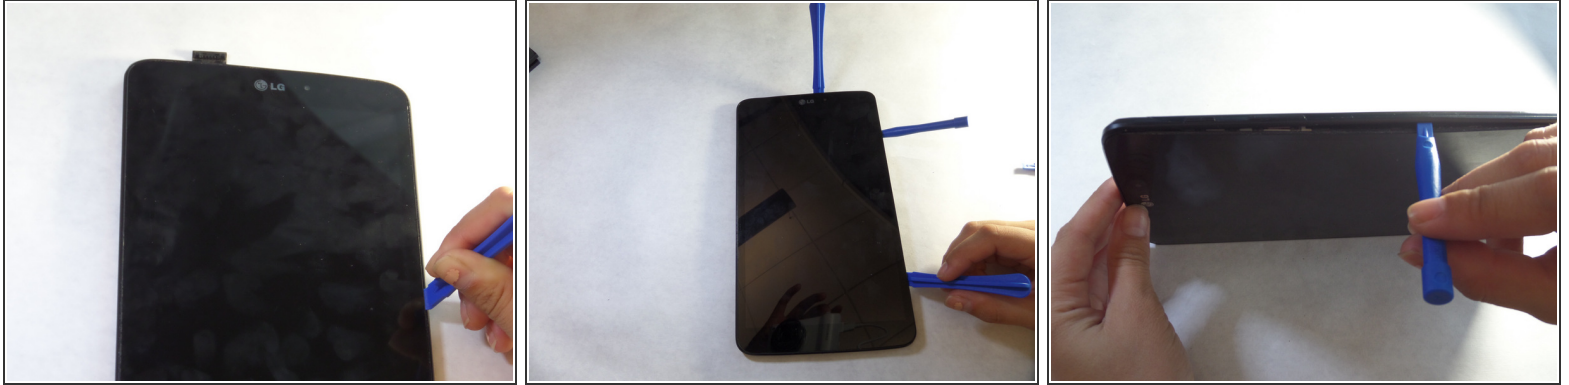



- Insert a plastic opening tool in the small crevasse between the screen and the back.
 - Pry the screen away from the back panel.
 - Repeat this on each edge of the device.
- i** We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.
- i** This requires heavy force. The back of the device is attached with adhesive. If the back panel is too hard to remove, use the [iOpener](#).

Step 3



- After using the plastic opening tools, pry open the device with your hands, removing the back panel from the screen.

Step 4 — Speaker

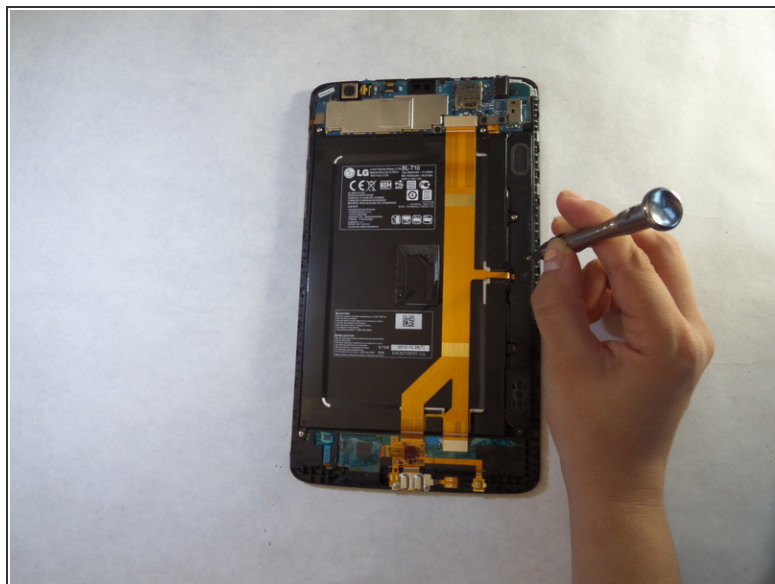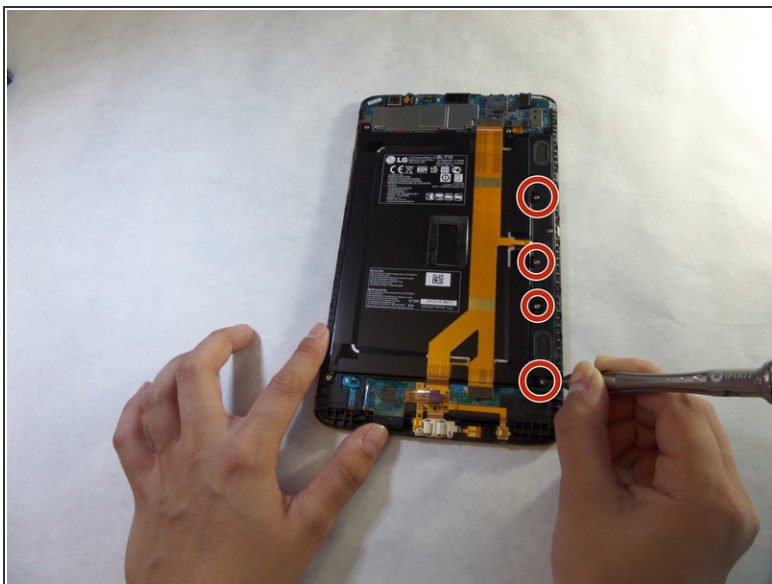

- Remove the four 3 mm Phillips screws that hold down the speaker.
- ☑ These screws are very small so make sure to keep track of them. You can use iFixit's [Pro Magnetic Project Mat](#) to help.

Step 5



- Use your fingers to remove the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-11 12:21:25 PM.